


# M24 CARTRIDGE – Installation Instructions

\*For internally threaded 24 mm tap outlets

1. Carefully remove the existing insert cartridge from the tap outlet by unscrewing anti-clockwise.

Remove the existing sealing washer and any scale deposits

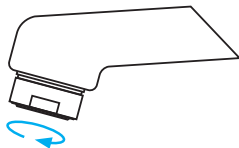

2. Fit the new sealing washer and assembled unit into the tap outlet and screw on clockwise. Be careful not to over tighten.



3. Test the unit by turning the tap on lightly for a spray pattern. Open the tap further and the spray will change to full flow. Turn the tap back and the unit will return to a spray pattern.

**Note:** Seals can take up to 72 hours to bed

\* If the tap outlet is not threaded you will need to use the **TAPMAGIC UNIFIT** systems available to fit plain bores from 15-19mm (5/8-3/4 inch) diameter.

\* If the tap outlet is externally threaded you will need to use the **TAPMAGIC M22 CARTRIDGE** system.