


# SPRAYMAGIC


Installation instructions for round, non-threaded\* tap outlets from 15-19mm (5/8-3/4 inch) diameter

Before installing **SPRAYMAGIC** ensure that the water pressure is not excessive and the tap has a round opening. Carefully remove any existing insert from the tap outlet by prising or twisting it out.


We don't recommend using excessive force as this could damage the tap outlet. Remove any scale deposits from the tap outlet and retain the insert in case you need to reinstall it in the future.

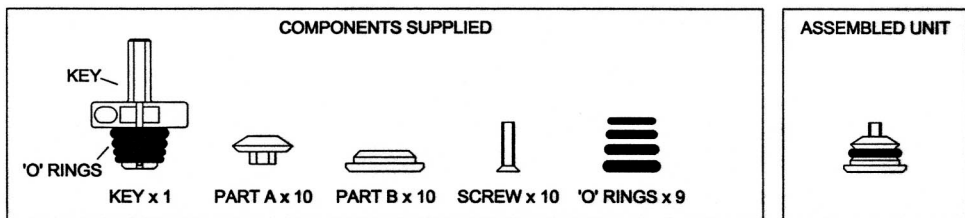


**1.** Select the largest diameter "O" ring that will fit inside the tap opening by inserting the "O" rings retained on the Installation key into the tap opening. Remove the selected "O" ring from the key.

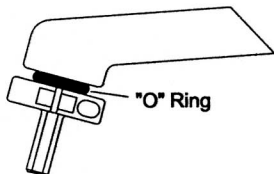

**2.** Loosen screw and fit the chosen "O" ring between part A and part B and insert the assembled unit into the tap opening

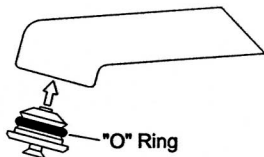

**3.** Holding the assembly in place, tighten screw clockwise to tighten.

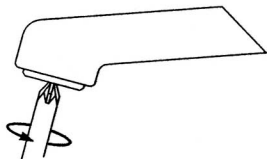

**4.** Test unit.

