


UNIFIT – Installation instructions for round, non-threaded* tap outlets from 15-19mm (5/8-3/4 inch) diameter


Before installing **TAPMAGIC** ensure that the tap has a round opening. Carefully remove any existing insert from the tap outlet by prising or twisting it out.

We don't recommend using excessive force as this could damage the tap outlet. Remove any scale deposits from the tap outlet and retain the insert in case you need to reinstall it in the future.


1. Select the largest diameter "O" ring that will fit inside the tap opening. Remove the selected "O" ring.




2. Slide the chosen "O" ring onto hex locknut and partially screw onto metal adaptor and insert.

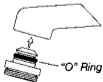

3. Holding the adaptor in place, insert the fitting key and rotate anti-clockwise to tighten.

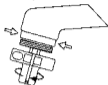

4. Insert cartridge in housing, position washer, and screw clockwise onto adaptor.

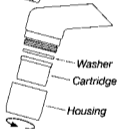

5. Test the unit by turning the tap on lightly for a spray pattern. Open the tap further and the spray will change to full flow. Turn the tap back and the unit will return to a spray pattern.

Note: Seals can take up to 72 hours to bed completely.

*If the tap is a modern threaded tap you will need to use the **TAPMAGIC** Cartridge systems available in the international M22 female or M24 male thread.